



**INTERACTIVE ADDRESSABLE
OPTICAL-SMOKE DETECTOR
WITH BUILT-IN LINE ISOLATOR**
TYPE **FD7130M**
INSTRUCTION MANUAL 03-7130M-11-23



**ПОЖАРОИЗВЕСТИТЕЛ ТОЧКОВ
ОПТИЧНО-ДИМЕН
АДРЕСИРУЕМ**
ТИП **FD7130M**
Паспорт 03-7130M-11-23



GENERAL DESCRIPTION

This fire detector is designed for early warning of a fire condition responding to fixed threshold smoke concentration detected in the protected premises. The principle of functioning of the detector is based on infrared rays distraction caused by smoke particles entering the optical chamber. The smoke sensitivity is programmable from the Fire Control Panel 7000M via specialized data exchange protocol UniTALK. A built-in isolator for short circuit protection is provided in the detector. FD7130M is fitted on base 7100.

The fire detector (fig. 1) consist of a printed circuit board and an optic chamber (pos.4) fixed in a plastic body (pos.5).

Both LED indicators (pos.3) allow range of visibility 360° and provide information for the status:

-Duty mode - both LEDs flash briefly every 12s;

-Alarm condition - both LEDs produce continuous light;

-Fault condition (activated isolator) - both LEDs flash briefly with 2 Hz frequency;

-Fault condition (short circuit in the remote indicator output or contaminated chamber) - both LEDs flash briefly with 0.5 Hz frequency.

TECHNICAL DATA

Supply voltage	(18-30)V DC
Current consumption in Duty Mode	not more than 300 µA
Current consumption in Alarm Condition	(2±1) mA
Current in Alarm Condition from output RI/KL	(2±1) mA
Time to enter Duty mode after power supply is on	up to 30s
Reset time	5s
Time to enter Duty mode after reset	up to 10s
Smoke sensitivity	middle or 20% higher (complies with EN54-7:2018) or 20% lower
Protected area	circle with diameter 15 m (comp.with EN 54-14)
Height of mounting	up to 11 m (comp.with EN 54-14)
Operational temperature range	minus 10°C - plus 55°C
Relative humidity resistance	(93±3)% at 40°C
Dimensions, base included	Ø100 mm, h 47mm
Weight, base included	> 0.100kg
Type of connecting line to the base	two-wire, a single-core or multi-core insulated, shielded wire
Cross section of the connecting wire	(0.8-1.5) mm ²

INSTALLATION

The fire detector operates with base type 7100. It is delivered separately and fixed on the desired place in advance by means of pins and screws. The electrical connection of the components necessary for the installation is done according to the schematic diagram on fig.2. It is recommended cable shoes to be used. It is not necessary to take into consideration the conditional beginnings and ends of the loops.

The fire detector is placed on the base (fig.1, pos.1). It is rotated clockwise until reaching the guiding grooves (fig.1, pos.2). It is rotated until rest (fig.3.1). The slots of the base and the box should match (fig.3.2).

Locking of the fire detector (fig.4). Before installation, the key (pos.3) is detached from the base and the rib (pos.1) of the locking click (pos.2) is cut out.

Removing of a fire detector locked to the base. Insert the key into the slot (pos.4) push in as in the same time the fire detector is rotated anticlockwise. Remove the key and continue to rotate the fire detector in the same direction until it is released from the base.

TESTING

The fire detector is tested after installation as a part of the site's fire alarm system or with maintenance activities, following this order:

1. Voltage is supplied to the fire detector from the fire alarm loop of the Fire Control Panel 7000M.
2. After the fire detector is in Duty mode it is activated with a Smoke Detector Tester. Within 20s the fire detector should enter Alarm condition.
3. A reset command is sent from the Fire Control Panel to the tested fire detector. It should restore Duty mode and it is ready for a new activation within 10s.

SERVICE SCHEDULE

It is done by authorized personnel and includes the following activities:

1. Inspection for visible physical damage - monthly
2. Testing in real conditions - monthly
3. Preventive cleaning of the optic chamber - every 6 months

*The fire detector is removed from the base. The body cover (fig.1, pos.6) is removed by rotating it to rest anticlockwise. The optic chamber cover (fig.1, pos.7) and the screen (fig.1, pos.8) are removed. For the optic chamber cover and the screen it is permitted washing liquid to be used. Then they should be rinsed out and dried. The optic chamber is dusted with a small brush. The optic chamber is compulsory dusted when the fire detector enters Contaminated chamber Mode. If it is not cleaned in due time it will get contaminated to such an extent that it would not allow the proper functioning of the fire detector which will be signaled as AlarmCondition.

WARRANTY

The warranty period is 36 months from the date of sale.

The manufacturer guarantees the normal operation of the fire detector providing that the requirements set herein have been observed.

The manufacturer does not bear warranty liabilities for damages caused through accidental mechanical damage, misuse, adaptation or modification after production. The manufacturer bears warranty liabilities for damages in the fire detector caused through manufacturer's fault only.



UniPOS Ltd., 47 San Stefano Str., Pleven 5800, Bulgaria
Declaration of Performance

No: 204/05.11.2020
EN54-17 2005/AC 2007
EN54-7:2018
FD7130M

Fire detection and fire alarm systems
installed in buildings.
Optical-smoke
(scattered light) point detectors

Essential characteristics	Performance
Nominal activation conditions / Sensitivity, Response delay (response time) and Performance under fire conditions	Pass
Operational reliability	Pass
Tolerance to supply voltage	Pass
Durability of operational reliability and response delay, Temperature resistance	Pass
Durability of operational reliability, Vibration resistance	Pass
Durability of operational reliability, Humidity resistance	Pass
Durability of operational reliability, Corrosion resistance	Pass
Durability of operational reliability, Electrical stability	Pass

ОБЩО ОПИСАНИЕ

Пожароизвестителят е предназначен за откриване на пожар в ранния стадий на неговото развитие по концентрацията на дим в охраняваната среда. Принципът на работа на пожароизвестителя се основава на разсейването на инфрачервени лъчи от частиците дим, попаднали в оптичната камера. Чувствителността на дим се задава програмно от пожароизвестителната централа 7000M по специализирания протокол за обмен на информация UniTALK. В пожароизвестителя има вграден изолатор на късо съединение. FD7130M се монтира на основа 7100.

Пожароизвестителят (фиг.1) се състои от печатна платка и оптична камера (поз.4), монтирани в пластмасов корпус (поз.5).

Двата светодиода (поз.3) позволяват видимост на 360° и дават информация за състояния:

-Покой - двата светодиода светват кратковременно през 12s;

-Тревога - двата светодиода светят непрекъснато;

-Повреда (задействан изолатор) - двата светодиода светват кратковременно с честота 2 Hz;

-Повреда (късо съединение в изхода за изнесен сигнализатор или замърсена камера) - двата светодиода светват кратковременно с честота 0.5 Hz.

ТЕХНИЧЕСКИ ХАРАКТЕРИСТИКИ

Захранващо напрежение	(18-30)V DC
Консумиран ток в състояние "Покой"	не повече от 300 µA
Консумиран ток в състояние "Тревога"	(2±1) mA
Ток в състояние "Тревога" от изход RI/KL	(2±1) mA
Време за установяване в състояние „Покой“ след включване на токозахранването	до 30s
Време за нулиране	5s
Време за установяване след нулиране	до 10s
Чувствителност на дим	средна или с 20% по-висока (съответстващи на EN54-7:2018) или с 20% по-ниска
Охранявана площ	кръг с диаметър 15 m (съответ. на EN 54-14)
Височина на монтажа	до 11 m (съответ. на EN 54-14)
Работен температурен диапазон	от минус 10°C до 55°C
Устойчивост на относителна влага	(93±3)% при температура 40°C
Габаритни размери с основа	Ø100 mm, h 47 mm
Маса на пожароизвестителя с основа	> 0.100 kg
Тип на свързващата основата линия	двупроводна, едножичен или двужичен изолиран, екраниран проводник
Сечение на свързващия проводник	(0,8-1,5) mm ²

МОНТАЖ

Пожароизвестителят се използва с основа тип 7100. Тя се доставя като отделно изделие и предварително се закрепва на желаното място чрез дюбели и винтове. Електрическият монтаж на необходимите за инсталацията компоненти се извършва по примерната схема на фиг.2. Препоръчва се използването на кабелни крайници. Не е необходимо да се вземат под внимание условните начала и краища на контура.

Пожароизвестителят се поставя върху основата (фиг.1, поз.1) и се завърта по посока на часовниковата стрелка до попадане в направляващите канали (фиг.1, поз.2). Завърта се до упор (фиг.3.1). Изрезите на основата и корпуса трябва да съвпадат (фиг.3.2). **Заклучване на пожароизвестителя (фиг.4).** Преди монтажа се отделя ключа (поз.3) от основата и се изрязва реброто (поз.1) на заключващия палец (поз.2).

Сваляне на заключен към основата пожароизвестител. Ключът се поставя в изреза (поз.4) и се притиска навътре, като същевременно пожароизвестителят се завърта обратно на часовниковата стрелка. Ключът се изважда и завъртането на пожароизвестителя продължава в същата посока до освобождаване от основата.

ТЕСТВАНЕ

Пожароизвестителят се тества след монтаж като част от пожароизвестителната система на обекта или при извършване на техническо обслужване в следната последователност:

1. Подава се захранващо напрежение на пожароизвестителя от пожароизвестителния контур на централа 7000M.
2. След като пожароизвестителят се установи в състояние "Покой", върху него се въздейства с тестер за димни пожароизвестители. За време не повече от 20s, пожароизвестителят трябва да се установи в състояние "Тревога".
3. Подава се команда за нулиране от пожароизвестителната централа към тествания пожароизвестител. Той трябва да се установи в състояние "Покой" и е готов за ново задействане след време не повече от 10s.

ТЕХНИЧЕСКО ОБСЛУЖВАНЕ

Извършва се от оторизирано лице и включва следните дейности:

1. Външен оглед за видими механични повреди - ежемесечно
2. Тестване в реални условия - ежемесечно
3. *Профилактично почистване на оптичната камера - на 6 месеца


*Пожароизвестителят се сваля от основата. Сваля се капачката на корпуса (фиг.1, поз.6) чрез завъртане до упор обратно на часовниковата стрелка. Изважда се капачката на оптичната камера (фиг.1, поз.7) и мрежичката (фиг.1, поз.8). За капачката на оптичната камера и мрежичката се допуска използването на миеш препарат, изплакване и подсушаване. Оптичната камера се почиства от прах с малка четка. **Задължително почистване се извършва, когато пожароизвестителят се установи в състояние "Замърсена камера"**. В случай на ненавременно почистване, тя може да се замърси до степен, непозволяваща по-нататъшната работа на пожароизвестителя, което ще бъде сигнализирано като състояние "Тревога".

ГАРАНЦИОННИ ЗАДЪЛЖЕНИЯ


Гаранционният срок е 36 месеца от датата на продажбата.

Фирмата-производител гарантира нормалната работа на пожароизвестителя при условие, че са спазени изискванията за експлоатация от настоящия паспорт.


Фирмата-производител не носи гаранционни задължения за неизправности, предизвикани от механични въздействия, използване на изделието не по предназначение или при изменения и модификации, извършени след производството. Фирмата-производител носи гаранционна отговорност само за повредите в пожароизвестителя, предизвикани по вина на самата фирма.

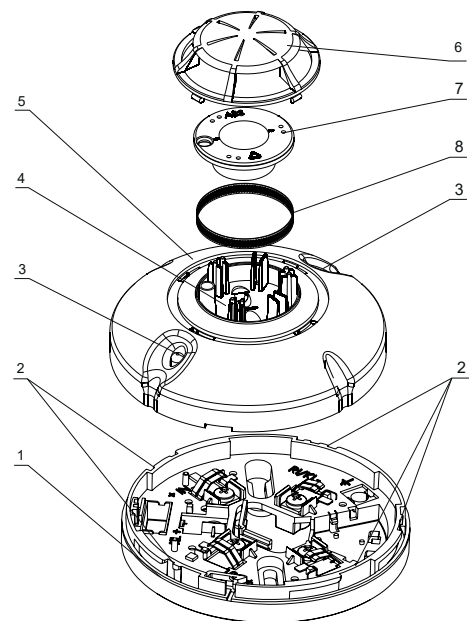


фиг.1/fig.1

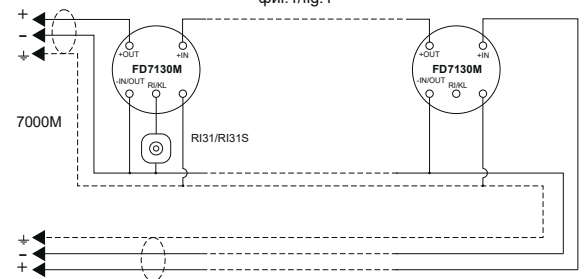


фиг.2/fig.2

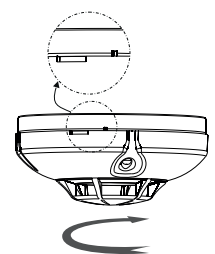

фиг.3.1/fig.3.1

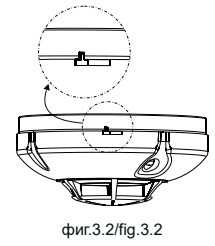

фиг.3.2/fig.3.2

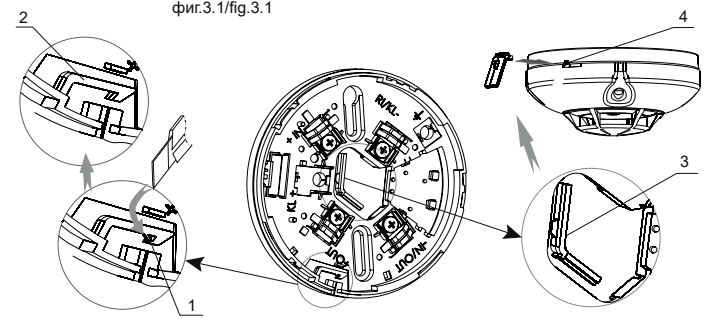

фиг.4/fig.4